




TIGER WINDOW FASHIONS

Trevi® Roman Shade Installation Instructions

Step-by-step instructions for proper installation of your new roman shade.

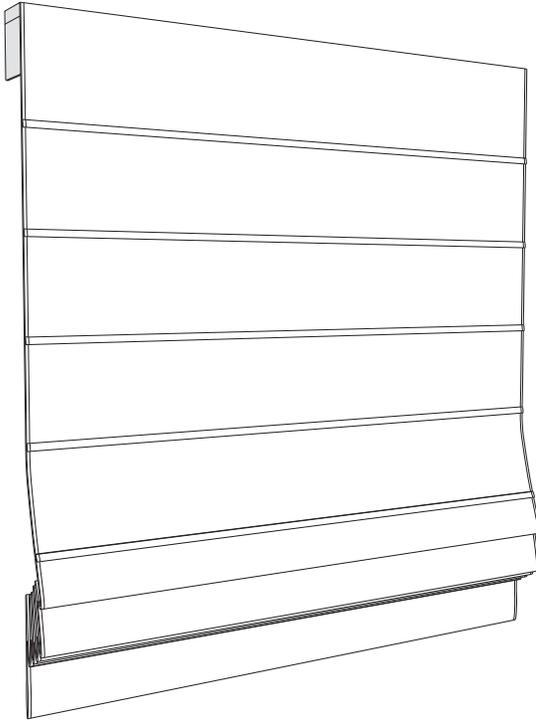

Getting Started

Carefully unpack your shade(s) and check to make sure you have all of the following installation parts for each of your shades. It is recommended to read this manual before proceeding with the installation.

Parts Included:

- Mounting Bracket Screws
- Mounting Brackets (x2)

Note:

The mounting brackets must be securely attached to the mounting surface. If your screws do not hit wood studs, you may have to use a different fastener available at any hardware store.

Recommended Tools:


- Drill with 1/8" bit
- Phillips screwdriver
- Tape Measure

ATTENTION. According to the Window Covering Manufacturers Association Inc., all labels must not be removed from the product.

Care and Cleaning

Minimal care and cleaning is needed to maintain the beauty of your shades. **To vacuum:** Use a hand held, low suction vacuum. **To dust:** Use a soft, clean cloth or feather duster. If using a mild cleaning solution, test on small area of fabric to make sure there will be no discoloration prior to application.

Step 1 - Select Mounting Option

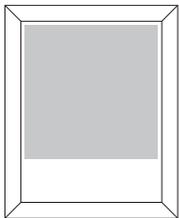

Inside Mount (IB)

Inside mount installations attach the brackets to the window frame, window molding, wall or ceiling, as shown. Internal shade roll brackets are universal so clutch mechanism may be mounted on either side.

Medium Headrail


Inside Mount (IB)

- Min. 1-1/8 in. (29mm)
- Min. (Flush) 2 in. (50mm)

Large Headrail

Inside Mount (IB)

- Min. 1-1/2 in. (38mm)
- Min. (Flush) 2-1/2 in. (64mm)

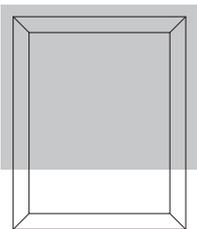


Outside Mount (OB)

Outside mount installations attach the brackets to the window casing, frame, molding, or wall, as shown. Internal shade roll brackets are universal so clutch mechanism may be mounted on either side.

Step 2 - Identify Mounting Hole Locations

The pre-drilled mounting holes are located in the top of the headrail of the shade. For inside mount installations, no mounting brackets are required. For outside mount installations, the use of provided "L" brackets is required. Depending on the width of your shade there may be more than two pre-drilled holes and/or bracket locations.

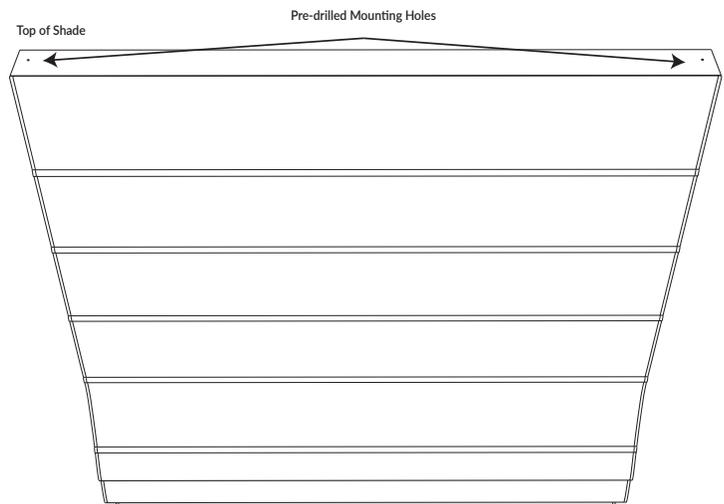




TIGER WINDOW FASHIONS

Trevi® Roman Shade Installation Instructions

Step-by-step instructions for proper installation of your new roman shade.

Step 3 - Installation

Inside/Ceiling Mount

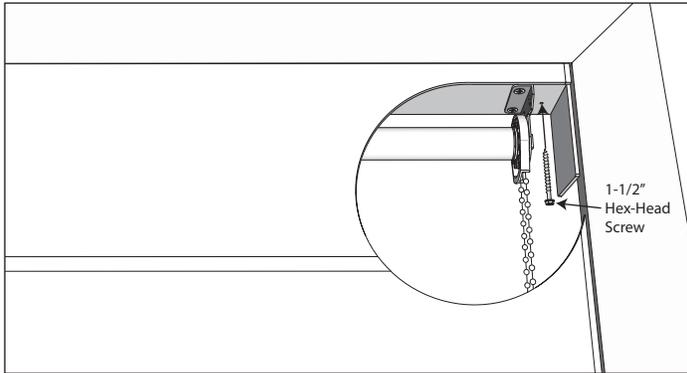


For inside mount or ceiling mount installations, the shades headrail attaches directly to the mounting surface, no mounting brackets are required. Position the shade in the window opening and using a 1/4 inch socket or a phillips head screw driver and the provided 1-1/2 inch hex-head screws, screw up through the top of the headrail through the pre-drilled mounting holes directly into the window frame or ceiling. Repeat for each pre-drilled mounting hole until the shade is securely mounted to surface.

Note: For shades 40 inches and larger there will be 3 or more mounting hole locations.

Note: If your screws do not hit solid wood or wood studs, you may have to use a different fastener available at any hardware store.

Outside Mount

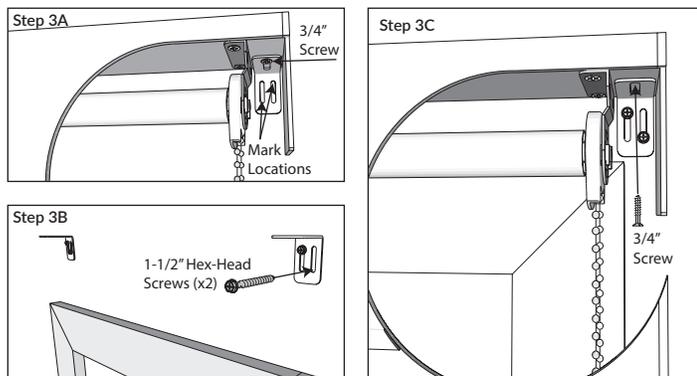

Step 3A: Begin by attaching the "L" brackets to the inside of the valance using the supplied 3/4 inch screws. Then position the shade in the desired location and while holding the shade in a level position, mark the mounting hole locations for each "L" bracket.

Note: For shades 40 inches and larger there will be 3 or more mounting bracket locations.


Step 3B: To mount the "L" brackets to the mounting surface, first remove them from the valance, then reposition each bracket on the mounting surface using the locations marked in Step 3A. Attach each "L" bracket to the mounting surface using the provided 1-1/2 inch hex-head screws with either a 1/4 inch socket or a phillips head screw driver.

Step 3C: Place the shade on the mounting brackets and attach the headrail to each bracket using a phillips head screw driver and the supplied 3/4 inch screws. Repeat for each bracket until the shade is securely attached to the brackets.

Note: The mounting brackets must be securely attached to the mounting surface. If your screws do not hit wood studs, you may have to use a

Step 4 - Installing the Bead Chain Tension Safety Device

Inside Mount

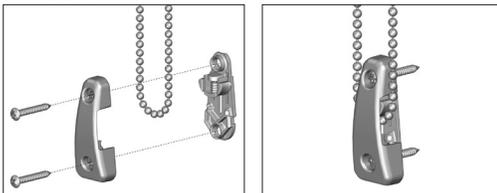


The bead chain tension safety device should be positioned on the window frame or the wall so that the tension device and the bead chain do not interfere with the operation of the window treatment.

The tension device should be installed so that the bead chain is taut without stretching or pulling on it. Stretching the bead chain will cause excessive wear. Do not twist or cross the bead chain.

Once installed, the loop should pass freely through the tension device.

Outside Mount

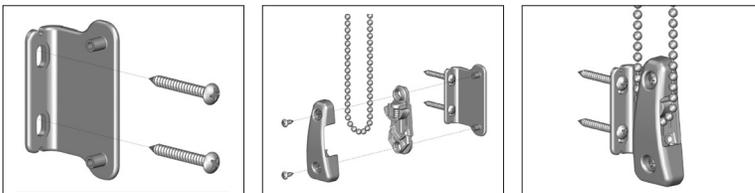

Note: When attaching to wood, included screws can be screwed directly into wood. When attaching to wall and metal, use anchors that are designed for such substrates available at your local hardware store.